SG01D-B18

UVB-only SiC based UV photodiode A = 0,50 mm²

GENERAL FEATURES

Properties of the SG01D–B18 UV photodiode

- UVB-only sensitivity, PTB reported high chip stability
- Active Area A = 0,50 mm²
- TO18 hermetically sealed metal housing, 1 isolated pin and 1 case pin
- 10µW/cm² peak radiation results a current of approx. 6,25 nA

About the material Silicon Carbide (SiC)

SiC provides the unique property of extreme radiation hardness, near-perfect visible blindness, low dark current, high speed and low noise. These features make SiC the best available material for visible blind semiconductor UV detectors. The SiC detectors can be permanently operated at up to 170° C (338° F). The temperature coefficient of signal (responsivity) is also low, < 0,1%/K. Because of the low noise (dark current in the fA range), very low UV radiation intensities can be measured reliably. Please note that this device needs an appropriate amplifier (see typical circuit on page 3).

Options

SG01

SiC photodiodes are available with seven different active chip areas from 0,06 mm² up to 36 mm². Standard version is broadband UVA-UVB-UVC. Four filtered versions lead to a tighter sensitivity range. All photodiodes have a hermetically sealed metal housing (TO type), either a 5,5 mm diameter TO18 housing or a 9,2 mm TO5 housing. Further option is either a 2 pin header (1 isolated, 1 grounded) or a 3 pin header (2 isolated, 1 grounded).

NOMENCLATURE

S, M, D, L, XL	nothing, A, B, C or E	18, 18ISO90, 18S, 5, 5ISO90	nothing, Lens MEGA, GIGA	
Chip area	Spectral response	Housing	Special	
S 0,06 mm²	nothing = broadband $\lambda_{max} = 280 \text{ nm}$ $\lambda_{S10\%} = 221 \text{ nm} \dots 358 \text{ nm}$	18 2-pin TO18 housing, h = 5,2 mm, 1 pin isolated, 1 pin grounded	Lens with concentrating	
M 0,20 mm²	A = UVA $λ_{max} = 331 \text{ nm}$ $λ_{S10\%} = 309 \text{ nm} \dots 367 \text{ nm}$	18ISO90 3-pin TO18 housing, h = 5,2 mm, 2 pins isolated, 1 pin grounded	lens, TO5 only	
D 0,50 mm²	B = UVB $λ_{max} = 280 \text{ nm}$ $λ_{s_{10}\%} = 231 \text{ nm} \dots 309 \text{ nm}$	185 2-pin TO18 housing, h = 3,7 mm, 1 pin isolated, 1 pin grounded	MEGA with attenuator up to 0,5 W/cm ²	
L 1,00 mm ²	C = UVC $\lambda_{max} = 275 \text{ nm}$ $\lambda_{S10\%} = 225 \text{ nm} \dots 287 \text{ nm}$	 2-pin TO5 housing, h = 4,3 mm for broadband; h = 6,7 mm for filtered UVA, UVB, UVC, UVI 	GIGA	
XL 7,60 mm²	E = UV-Index spectral response according to CIEo87	5ISO90 3-pin TO5 housing, h = 4,2 mm, 2 pins isolated, 1 pin grounded	with attenuator up to 7 W/cm ²	

sglux GmbH | Max-Planck-Str. 3 | D–12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de

Rev. 6.2 Due to our strive for continuous improvement, specifications are subject to change within our PCN policy according to JESD46C.







SG01D–B18 UVB-only SiC based UV photodiode A = 0,50 mm²




2/4

SPECIFICATIONS

Symbol	Value	Unit
S _{max}	0,125	AW -1
λ_{max}	280	nm
-	231 309	nm
VB	> 10 ¹⁰	-
А	0,50	mm²
ld	1,7	fA
С	125	pF
lo	6,25	nA
T _c	< 0,1	%/K
T _{opt}	-55 +170	°C
T _{stor}	-55 +170	°C
T _{sold}	260	°C
V_{Rmax}	20	V
	Smax λmax - VB A Id C Io Tc Topt Tstor Tsold	$\begin{array}{cccc} S_{max} & 0,125 \\ \lambda_{max} & 280 \\ - & 231 \dots 309 \\ VB & > 10^{10} \\ \end{array}$ $\begin{array}{cccc} A & 0,50 \\ Id & 1,7 \\ C & 125 \\ Io & 6,25 \\ T_{C} & < 0,1 \\ \end{array}$ $\begin{array}{cccc} T_{opt} & -55 \dots +170 \\ T_{stor} & -55 \dots +170 \\ T_{sold} & 260 \\ \end{array}$

NORMALIZED SPECTRAL RESPONSIVITY

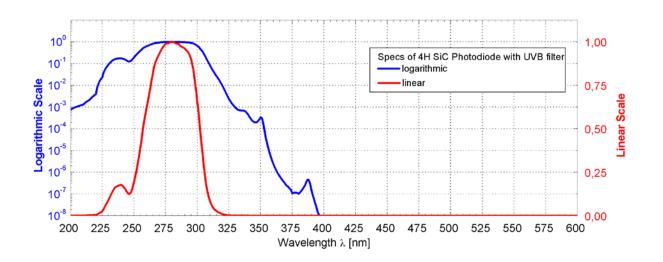


sg/ux GmbH | Max-Planck-Str. 3 | D–12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de

Rev. 6.2 Due to our strive for continuous improvement, specifications are subject to change within our PCN policy according to JESD46C.


SG01D–B18 UVB-only SiC based UV photodiode A = 0,50 mm²



FIELD OF VIEW

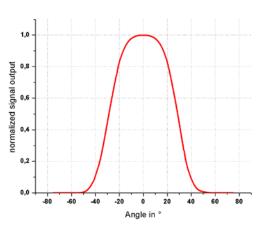

TYPICAL CIRCUIT

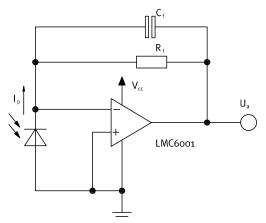

DRAWINGS

Measurement Setup:

lamp aperture diameter: 10 mm distance lamp aperture to second aperture: 17 mm second aperture diameter: 10 mm distance second aperture to detector: 93 mm

pivot level = top surface of the photodiode window

Calculations and Limits:

 $U_a = I_p x R_f = o \dots \sim V_{cc}$


U_{a,max} depends on load and amplifier type

$$\begin{split} R_f &= 10 k \Omega \ ... \ \sim \ 10 G \Omega, \ C_f \geq 3 p F \\ Recommendation: \ R_f x \ C_f \geq 10^{-3} s \\ I_{p,max} &= U_{a,max} \ \div \ R_f \end{split}$$

Bandwidth = DC ...

$$\frac{1}{2\pi \ x \ R_f x \ C_f}$$

Example: I_p = 20nA, R_f =100M Ω , C_f =100 pF U_a = 20 x 10⁹A x 100 x 10⁶ Ω = 2V

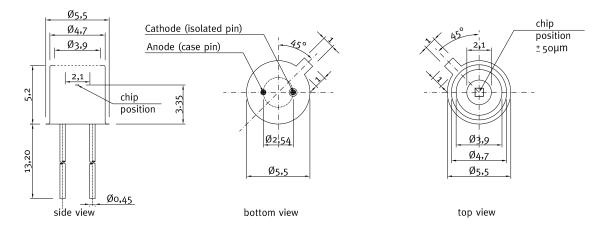

sglux GmbH | Max-Planck-Str. 3 | D-12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de

Rev. 6.2 Due to our strive for continuous improvement, specifications are subject to change within our PCN policy according to JESD46C.



SG01D-B18

UVB-only SiC based UV photodiode A = 0,50 mm²





APPLICATION NOTE FOR PHOTODIODES

For correct reading of the photodiode the current (and NOT the voltage) must be analyzed. This requires a short circuiting of the photodiode. Usual approaches are using a **Picoamperemeter** or a **transimpedance amplifier** circuit as shown on page 3.

UPGRADE TO A TOCON OR A PROBE



TOCONs = UV sensors with integrated amplifier

- SiC based UV hybrid detector with amplifier (o-5V output), no additional amplifier needed, direct connection to controller, voltmeter, etc.
- Measures intensities from 1,8 pW/cm² up to 18 W/cm²
- UV broadband, UVA, UVB, UVC or Erythema measurements



Miniature housing with M12x1 thread for the TOCON series


- Optional feature for all TOCON detectors
- Robust stainless steel M12x1 thread body
- Integrated sensor connector (Binder 5-Pin plug) with 2m connector cable
- Easy to mount and connect



Industrial UV probes

- Different housings e.g. with cosine response, water pressure proof or sapphire windows
- Different electronic outputs configurable (voltage, current, USB, CAN)
 - Good EMC safety for industrial applications

CALIBRATION SERVICE

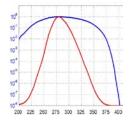

- Different NIST and PTB traceable calibrations and measurements for all sglux sensors
- Calibration of sensors for irradiation measurements
- Calibration of UV sensors on discrete wavelengths
- Determination of a specific spectral sensor responsivity

sglux GmbH | Max-Planck-Str. 3 | D–12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de