
Broadband SiC based UV photodiode $A = 1,0 \text{ mm}^2$



1/4

GENERAL FEATURES



- Broadband UVA+UVB+UVC, PTB reported high chip stability
- Active Area A = 1,0 mm²
- TO18 hermetically sealed metal housing, two isolated pins in a circle
- 10µW/cm² peak radiation results a current of approx. 13 nA

About the material Silicon Carbide (SiC)

SiC provides the unique property of extreme radiation hardness, near-perfect visible blindness, low dark current, high speed and low noise. These features make SiC the best available material for visible blind semiconductor UV detectors. The SiC detectors can be permanently operated at up to 170° C (338° F). The temperature coefficient of signal (responsivity) is also low, < 0,1%/K. Because of the low noise (dark current in the fA range), very low UV radiation intensities can be measured reliably. Please note that this device needs an appropriate amplifier (see typical circuit on page 3).

Options

SG01

SiC photodiodes are available with seven different active chip areas from 0,06 mm² up to 36 mm². Standard version is broadband UVA-UVB-UVC. Four filtered versions lead to a tighter sensitivity range. All photodiodes have a hermetically sealed metal housing (TO type), either a 5,5 mm diameter TO18 housing or a 9,2 mm TO5 housing. Further option is either a 2 pin header (1 isolated, 1 grounded) or a 3 pin header (2 isolated, 1 grounded).

NOMENCLATURE

| S, M, D, L, XL | nothing, A, B, C or E | 18, 18 S090, 18S, 5, 5 S090 | nothing, Lens, MEGA, GIGA | |
|----------------------------------|--|--|---|--|
| Chip area | Spectral response | Housing | Special | |
| S 0,06 mm ² | nothing = broadband $\lambda_{max} = 280 \text{ nm}$ $\lambda_{S10\%} = 221 \text{ nm} \dots 358 \text{ nm}$ | 18 2-pin TO18 housing, h = 5,2 mm, 1 pin isolated, 1 pin grounded | Lens with concentrating lens, TO5 only | |
| M 0,20 mm ² | A = UVA $λ_{max} = 331 \text{ nm}$ $λ_{510\%} = 309 \text{ nm} \dots 367 \text{ nm}$ | 1815090 3-pin TO18 housing, h = 5,2 mm, 2 pins isolated, 1 pin grounded | | |
| D 0,50 mm² | B = UVB $λ_{max} = 280 \text{ nm}$ $λ_{S10\%} = 231 \text{ nm} \dots 309 \text{ nm}$ | 185 2-pin TO18 housing, h = 3,7 mm, 1 pin isolated, 1 pin grounded | MEGA with attenuator up to 0,5 W/cm ² | |
| L 1,00 mm ² | C = UVC $\lambda_{max} = 275 \text{ nm}$ $\lambda_{S10\%} = 225 \text{ nm} \dots 287 \text{ nm}$ | 5 2-pin TO5 housing, h = 4,3 mm for broadband; h = 6,7 mm for filtered UVA, UVB, UVC, UVI | GIGA with attenuator up to 7 W/cm ² | |
| XL 7,60 mm² | E = UV-Index spectral response according to CIE087 | 51SO90 3-pin TO5 housing, h = 4,2 mm, 2 pins isolated, 1 pin grounded | | |

sglux GmbH | Max-Planck-Str. 3 | D–12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de

Rev. 6.4 Due to our strive for continuous improvement, specifications are subject to change within our PCN policy according to JESD46C.



Broadband SiC based UV photodiode $A = 1,0 \text{ mm}^2$




2/4

SPECIFICATIONS

| Parameter | Symbol | Value | Unit |
|--|-------------------|--------------------|-------|
| Spectral Characteristics | | | |
| Typical Responsivity at Peak Wavelength | Smax | 0,130 | AW -1 |
| Wavelength of max. Spectral Responsivity | λ_{max} | 280 | nm |
| Responsivity Range (S=0,1*S _{max}) | - | 221 358 | nm |
| Visible Blindness ($S_{max}/S_{>405nm}$) | VB | > 10 ¹⁰ | - |
| General Characteristics (T=25°C) | | | |
| Active Area | А | 1,0 | mm² |
| Dark Current (1V reverse bias) | ld | 3,3 | fA |
| Capacitance | C | 250 | pF |
| Short Circuit (10µW/cm² at peak) | lo | 13 | nA |
| Temperature Coefficient | Tc | < 0,1 | %/K |
| Maximum Ratings | | | |
| Operating Temperature | T _{opt} | -55 +170 | °C |
| Storage Temperature | T _{stor} | -55 +170 | °C |
| Soldering Temperature (3s) | T _{sold} | 260 | °C |
| Reverse Voltage | V_{Rmax} | 20 | V |

NORMALIZED SPECTRAL RESPONSIVITY

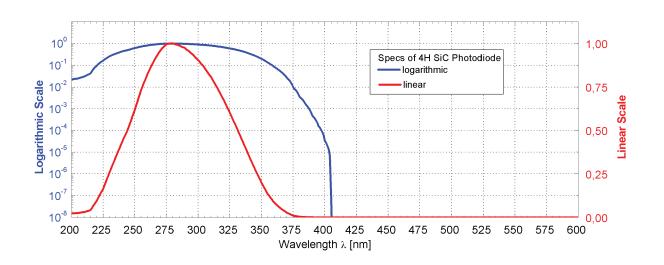


sglux GmbH | Max-Planck-Str. 3 | D–12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de

Rev. 6.4 Due to our strive for continuous improvement, specifications are subject to change within our PCN policy according to JESD46C.

Broadband SiC based UV photodiode $A = 1,0 \text{ mm}^2$



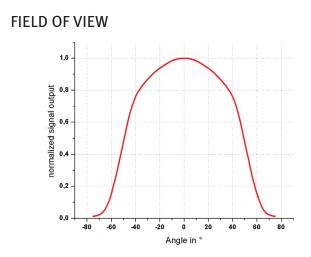


Measurement Setup:

lamp aperture diameter: 10 mm distance lamp aperture to second aperture: 17 mm second aperture diameter: 10 mm distance second aperture to detector: 93 mm

pivot level = top surface of the photodiode window

TYPICAL CIRCUIT

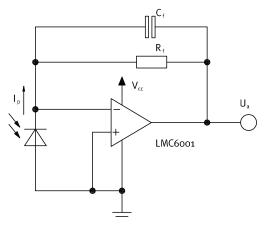

 $U_a = I_p x R_f = o \dots \sim V_{cc}$

Calculations and Limits:


U_{a,max} depends on load and amplifier type

$$\begin{split} R_{f} &= 10k\Omega \ ... \ \sim \ 10G\Omega, \ C_{f} \geq 3pF \\ Recommendation: \ R_{f}x \ C_{f} \geq 10^{-3}s \\ I_{p,max} &= U_{a,max} \div \ R_{f} \end{split}$$

Bandwidth = DC ...

$$\frac{1}{2\pi \text{ x } \text{ R}_{\text{f}} \text{ x } \text{ C}_{\text{f}}}$$

Example: I_p = 20nA, R_f =100M Ω , C_f =100 pF U_a = 20 x 10⁹A x 100 x 10⁶ Ω = 2V

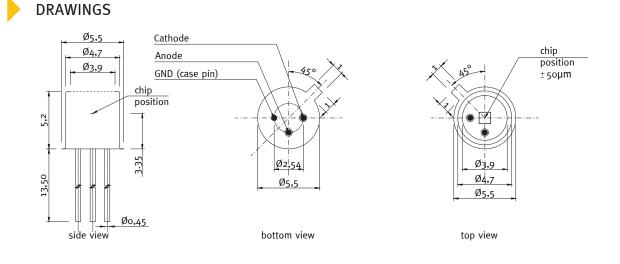

sglux GmbH | Max-Planck-Str. 3 | D-12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de

Rev. 6.4 Due to our strive for continuous improvement, specifications are subject to change within our PCN policy according to JESD46C.



Broadband SiC based UV photodiode A =1,0 mm²





APPLICATION NOTE FOR PHOTODIODES

For correct reading of the photodiode the current (and NOT the voltage) must be analyzed. This requires a short circuiting of the photodiode. Usual approaches are using a **Picoamperemeter** or a **transimpedance amplifier** circuit as shown on page 3.

UPGRADE TO A TOCON OR A PROBE



TOCONs = UV sensors with integrated amplifier

- SiC based UV hybrid detector with amplifier (o-5V output), no additional amplifier needed, direct connection to controller, voltmeter, etc.
- \bullet Measures intensities from 1,8 pW/cm² up to 18 W/cm²
- UV broadband, UVA, UVB, UVC or Erythema measurements



Miniature housing with M12x1 thread for the TOCON series


- Optional feature for all TOCON detectors
- Robust stainless steel M12x1 thread body
- Integrated sensor connector (Binder 5-Pin plug) with 2m connector cable
- Easy to mount and connect



Industrial UV probes

- Different housings e.g. with cosine response, water pressure proof or sapphire windows
- Different electronic outputs configurable (voltage, current, USB, CAN)
 - Good EMC safety for industrial applications

CALIBRATION SERVICE

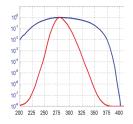

- Different NIST and PTB traceable calibrations and measurements for all sglux sensors
- Calibration of sensors for irradiation measurements
- Calibration of UV sensors on discrete wavelengths
- Determination of a specific spectral sensor responsivity

sg/ux GmbH | Max-Planck-Str. 3 | D–12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de