## TOCON C5



UVC-only SiC based UV photodetector with integrated amplifier

1/4

#### **GENERAL FEATURES**



#### Properties of the TOCON\_C5

- UVC-only SiC based UV photodetector in TO5 housing with diffusor
- spectral response compliant with DVGW W294
- o... 5 V voltage output, peak wavelength at 275 nm
- max. radiation (saturation limit) at 254 nm is 180 μW/cm², minimum radiation (resolution limit) is 18 nW/cm²
- Applications: purification lamp control

#### What is a TOCON?

A TOCON is a 5 Volt powered UV photodetector with integrated amplifier converting UV radiation into a o...5V voltage output. The V<sub>out</sub> pin of the TOCON can be directly connected to a controller, a voltmeter or any other data analyzing device with voltage input. Highly modern electronic components and a hermetically sealed metal housing with UV glass window eliminates noise caused by parasitic resistance paths inside the package or EMI. A TOCON is a perfect solution for each industrial UV sensing application starting from flame detection at pW/cm² level up to UV curing lamp control at W/cm² level. This thirteen orders of magnitude range is covered by ten different TOCONs that differ by their sensitivity. The TOCONs are produced as UV broadband sensors or with filters for selective measurement.

#### Silicon Carbide (SiC) detector chip inside

Sophisticated electronics make a TOCON a reliable component in harsh environments as well as for extremely low or extremely high UV radiation. But what makes the TOCON a quasi eternally living sensor is the sglux in-house produced SiC detector chip featured by a PTB-reported extreme radiation hardness.

#### NOMENCLATURE

TOCON_	ABC, A, B, C, blue or GaP	1 10
	Spectral response	Irradiance limits ( $V_{supply}=5V$ , $\lambda=\lambda_{peak}$ )
	<b>ABC = broadband</b> $\lambda_{\text{max}} = 290 \text{ nm}  \lambda_{\text{S10\%}} = 227 \text{ nm} \dots 360 \text{ nm}$	<b>1</b> = 1,8 pW/cm <sup>2</sup> 1,8 nW/cm <sup>2</sup>
	11th 52070	2 = 18 pW/cm <sup>2</sup> 180 nW/cm <sup>2</sup>
	<b>A = UVA</b> $\lambda_{\text{max}} = 331 \text{nm}  \lambda_{\text{S}_{10}\%} = 309 \text{nm} \dots 367 \text{nm}$	<b>3</b> = 180 pW/cm <sup>2</sup> 1,8 μW/cm <sup>2</sup>
	B = UVB	<b>4</b> = 1,8 nW/cm <sup>2</sup> 18 μW/cm <sup>2</sup>
	$\lambda_{\text{max}} = 280 \text{ nm}  \lambda_{\text{S10\%}} = 243 \text{ nm} \dots 303 \text{ nm}$	<b>5</b> = 18 nW/cm <sup>2</sup> 18ο μW/cm <sup>2</sup>
	<b>C = UVC</b> $\lambda_{\text{max}} = 275 \text{ nm}  \lambda_{\text{S}_{10}\%} = 225 \text{ nm} \dots 287 \text{ nm}$	<b>6</b> = 180 nW/cm <sup>2</sup> 1,8 mW/cm <sup>2</sup>
		$7 = 1.8 \mu\text{W/cm}^2 \dots 18 \text{mW/cm}^2$
	<b>Blue</b> $\lambda_{\text{max}} = 445 \text{ nm}  \lambda_{\text{S10\%}} = 390 \text{ nm} \dots 515 \text{ nm}$	<b>8</b> = $18  \mu W/cm^2$ $180  mW/cm^2$
	Gap	<b>9</b> = 18ο μW/cm <sup>2</sup> 1,8 W/cm <sup>2</sup>
	$\lambda_{\text{max}} = 445 \text{ nm}$ $\lambda_{\text{S10\%}} = 190 \text{ nm} \dots 570 \text{ nm}$	<b>10</b> = 1,8 mW/cm <sup>2</sup> 18 W/cm <sup>2</sup>
	E = UV-Index spectral response according to CIEo87	<b>2</b> = 0 UVI 30 UVI

sglux GmbH | Max-Planck-Str. 3 | D-12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de

## TOCON\_C5




UVC-only SiC based UV photodetector with integrated amplifier

#### **SPECIFICATIONS**

2/4

Parameter	Symbol	Value	Unit	
Spectral Characteristics				
Typical Responsivity at Wavelength 254 nm	$S_{\text{max}}$	28	$\text{mV}/\mu\text{W}/\text{cm}^2$	
Wavelength of max. Spectral Responsivity	$\lambda_{\text{max}}$	275	nm	
Responsivity Range ( $S=0,1*S_{max}$ )	-	225 287	nm	
Visible Blindness $(S_{max}/S_{>405nm})$	VB	> 10 <sup>10</sup>	-	
General Characteristics (T=25°C, <sub>Vsupply</sub> =+5 V)				
Supply Voltage	$V_{Supply}$	2,5 5	V	
Saturation Voltage	$V_{Sat}$	V <sub>Supply</sub> - 5%	V	
Dark Offset Voltage	$V_{\text{Offset}}$	50	μV	
Temperature Coefficient at Peak	$T_c$	< -0,3	%/K	
Current Consumption	1	150	μΑ	
Bandwidth (-3 dB)	В	15	Hz	
Risetime (10-90%)	$t_{rise}$	0,062	S	
(other risetimes on request)				
Maximum Ratings				
Operating Temperature	$T_{opt}$	−25 <b></b> +85	°C	
Storage Temperature	$T_{stor}$	-40 +100	°C	
Soldering Temperature (3s)	$T_{sold}$	300	°C	

#### NORMALIZED SPECTRAL RESPONSIVITY

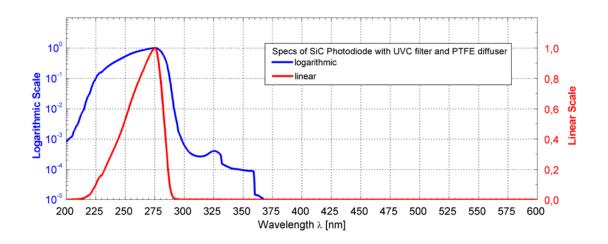

sglux GmbH | Max-Planck-Str. 3 | D-12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de


## TOCON\_C5



UVC-only SiC based UV photodetector with integrated amplifier

#### FIELD OF VIEW

3/4





lamp aperture diameter: 10 mm distance lamp aperture to second aperture: 17 mm second aperture diameter: 10 mm distance second aperture to detector: 93 mm

pivot level = top surface of the detector window

# 

#### DRAWING

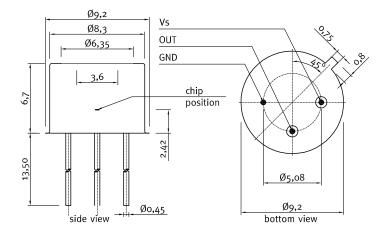

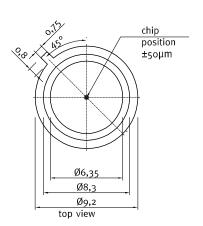

## TOCON\_C5



UVC-only SiC based UV photodetector with integrated amplifier

### 4/4

#### APPLICATION NOTE FOR TOCONS

The TOCONs need a supply voltage of  $V_{\text{supply}}=2.5...5V_{DC}$  and can be directly connected to a controller or voltmeter. Please note that the theoretic maximum signal output is always a little less (approx. 5%) than the supply voltage. To learn more about perfect use of the TOCONs please refer to the TOCON FAQ list published at www.sglux.com.

**CAUTION!** Wrong wiring leads to destruction of the device.

For easy setup of the device please ask for a TOCON starter kit.



#### Miniature steel housing with M12x1 thread for the TOCON series

- Optional feature for all TOCON detectors
- Robust stainless steel M12x1 thread body, length 32 mm
- Integrated sensor connector (Binder 5-Pin plug) with 2m connector cable
- Easy to mount and to connect



#### Miniature PTFE housing with M12x1 thread for the TOCON series

- Optional feature for all TOCON detectors without concentrator lens
- Teflon (PTFE) M12x1 thread body, length 31 mm
- Wide field of view, dirt-repellant, water proof at wet side (IP 68)
- Integrated sensor connector (Binder 5-Pin plug) with 2m connector cable
- Easy to mount and connect, cleanable

The PTFE housing reduces the signal output by approx. 95%. Please consider this while selecting the TOCON's sensitivity range.



#### **Plastic probes**

- Optional feature for all TOCON detectors
- UV probes in small plastic housings with a TOCON inside
- Customized housings available
- Easy to mount and to connect
- Integrated sensor connector (Binder 5-Pin plug)
- Cable available



#### Water pressure proof TOCON housing

- Optional feature for all TOCON detectors without concentrator lens
- G1/4" thread, 10 bar water pressure proof
- Customized housings available
- Easy to mount and to connect
- Integrated sensor connector (Binder 5-Pin plug)
- Cable available